



INSTALLATION INSTRUCTIONS: BROUHARD FLOOR BOARDS


Part #'s : FB-0001-B/FB-0001-C **KIT INCLUDES:** right and left boards

Do not attempt to fit parts to motorcycle unless properly trained. Incorrect fitment may result in injury or death.



1. Locate board you wish to start with.

2. Using a 3/16 allen and a 7/16 socket, remove both sets of mounting hardware.

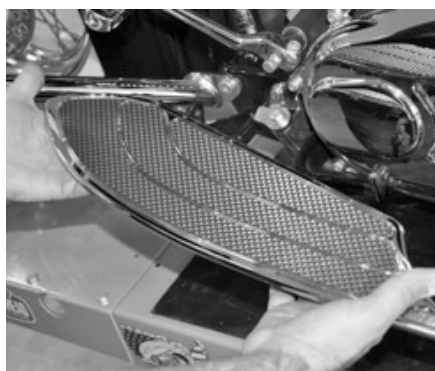

3. Remove and replace with Brouhard floorboard.

4. Reinstall the stock hardware and tighten according to your service manual.



5. Repeat on other side.

6. Enjoy

Thank you for purchasing a Brouhard designed product. Extreme care has gone into the design and production. Should you not be 100% satisfied or have any questions, please email us at brouharddesigns@yahoo.com